


!!! REFER TO GENERAL NOTES FOR SAFETY INFORMATION !!!

## PARTS

PART	DESCRIPTION
1	Top Bracket
2	Pin
3	Spring
4	Bottom Bracket
5	Pin


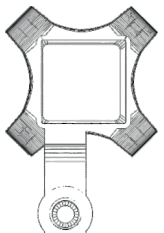

Code:  
**SGH**


Weight:  
**1.3kg (2.87lb)**

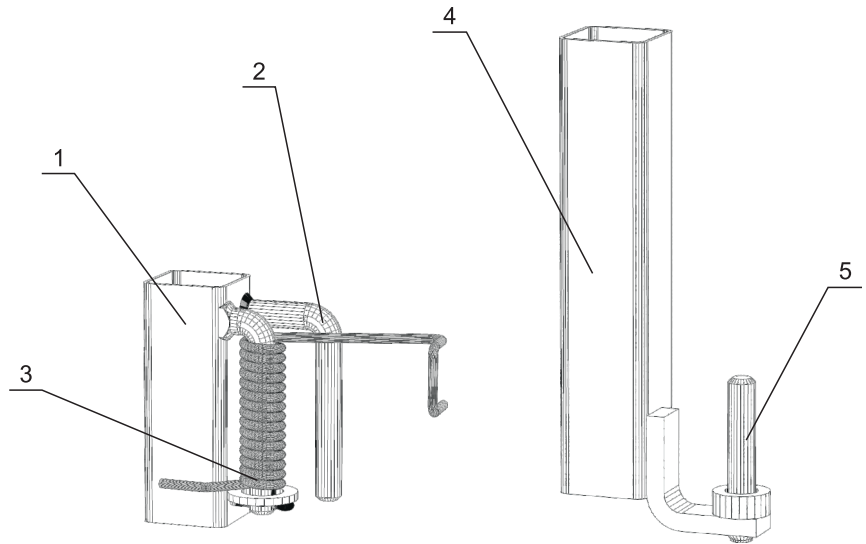

## INSTALLATION

FOR MORE TECHNICAL INFORMATION CONTACT US AT: [infotech@integrityworldwide.ca](mailto:infotech@integrityworldwide.ca)

	<ul style="list-style-type: none"> <li>Remove the bottom foot from the <b>Speed Post Velocity</b> by turning it counter-clockwise</li> <li>Slide the top bracket onto the post with the pin facing down</li> <li>Slide the bottom bracket onto the post with the pin facing up. Pay special attention that the pins of the top and bottom brackets are in line with each other</li> <li>Screw the bottom foot back into the <b>Speed Post Velocity</b> by turning it clockwise</li> </ul> <p style="text-align: right;"><b>1</b></p>	 <ul style="list-style-type: none"> <li>Install the <b>Speed Post Velocity</b> as per instruction</li> <li>Ensure the pin on the bottom bracket is between one of the spaces on the bottom foot</li> </ul> <p style="text-align: right;"><b>2</b></p>	<ul style="list-style-type: none"> <li>Slide the top bracket above the position where the top of the <b>Fence Gate</b> will sit</li> </ul>	 <p style="text-align: right;"><b>3</b></p>
---	--	--	--	--

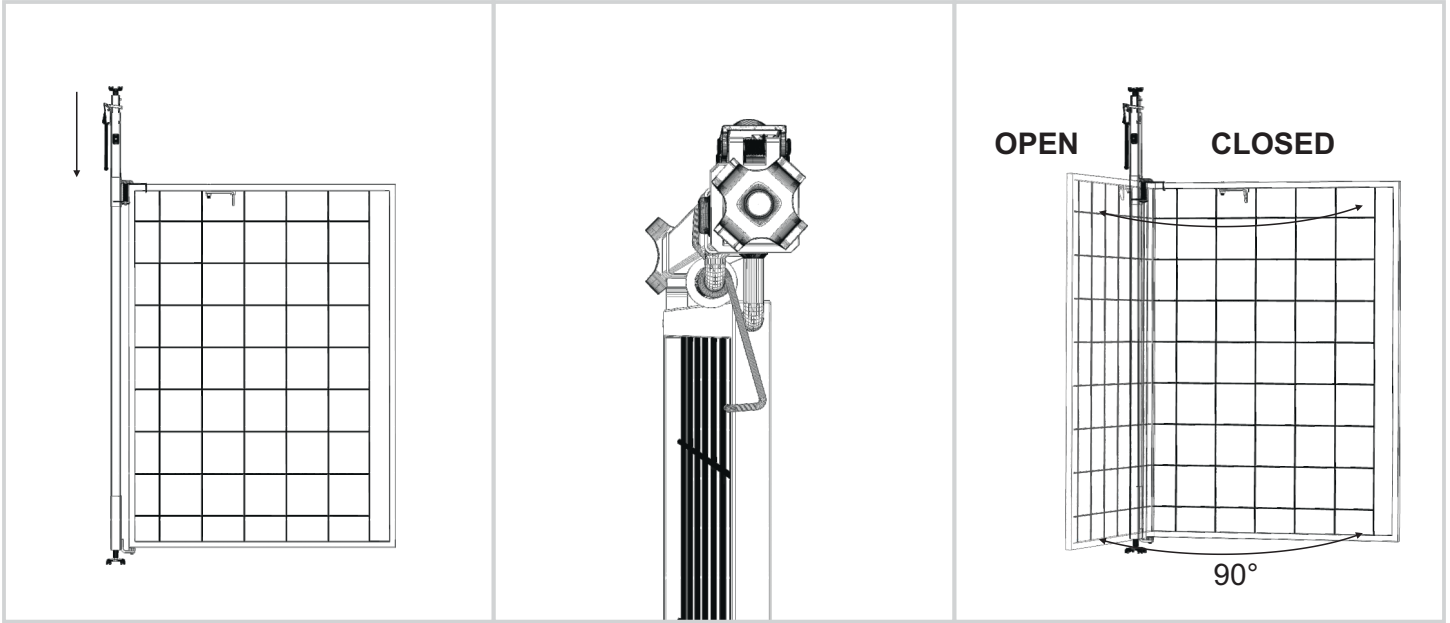

- Sit the **Fence Gate** on the pin of the bottom bracket and slide the top bracket until the pin is firmly in the top hole of the fence

4

- Ensure the spring is in contact with the **Fence Gate**

5

- Test the **Fence Gate** by opening it 90° from its closed position

6

NOTE:

---



---



---



---



---



---



---



---



---



---

Distributed by:



## Spring Gate Hinge Instruction